

Factory settings of the 3-way valve on AC –TCW-...60-...

1. Turn the unit OFF using either the circuit-breaker or OFF switch (on the bottom of the electric box)
2. Remove the black wheel with the red actuator icon
3. Dismount the actuator from the 3-way valve (using the cross-screw)
4. Remove black cover using the screw on the actuator's side




5. Turn the unit ON using either the circuit breaker or ON switch
6. Wait until the actuator is in this position (limit position); the main switch (on the touch-screen display) must be OFF



7. Turn the unit OFF using either the circuit breaker or OFF switch
8. Turn the 3-way valve to this position

**Chilled water outlet –
direction from heat
exchanger**

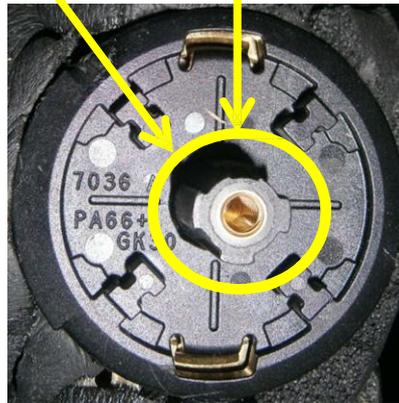

9. Put the actuator back on the 3-way valve and tighten the screw
10. Put the black cover back on the actuator
11. Put the wheel of the actuator back on
12. Push the black wheel down
13. Turn the unit ON using either the circuit-breaker or ON switch
14. Turn the unit ON using the main touch-screen display switch